

---

# FIAT

## Elite Control Installation and Operation Instructions



**Fiat Products LTD.**  
255 Hutchings Street  
Winnipeg, Manitoba  
R2X 2R4, Canada

TEL. 204-633-6122  
**Service info.** (800) 585-STEM (7832)

## Installation instructions for the Fiat Control

1. The Fiat control must be located inside the shower area.
2. Position the control 4 to 6 feet from the floor inside the steam room. Drill one 1¼" hole in the wall. **DO NOT position over steam head.**
3. Bring the control wire from the generator through the 1¼" hole. Carefully connect the wire to the touch pad connector. **DO NOT pinch, nail, wedge etc. the control cable, any damage to the control cable will result in the control not working properly. If the control is not installed immediately, protect the end connectors with tape or some other kind of shielding material.**
4. Carefully connect the other end of the lead wire to the generator.
5. Turn on both water and power to the generator.
6. Test the control to ensure it is properly connected. If any technical problems arise, call toll free 800-585-7832.
7. Carefully peel the backing off the adhesive on the control. Apply a thin layer of waterproof silicone to the back of the control. Press firmly onto the wall and allow drying for 24 hours, (see figure 1).

**Failure to follow installation instructions specifically may cause the warranty to be void!**

**Carefully peel the backing off the adhesive on the control and coat with enough waterproof silicon to completely seal the control to the wall and not allow moisture behind it.**

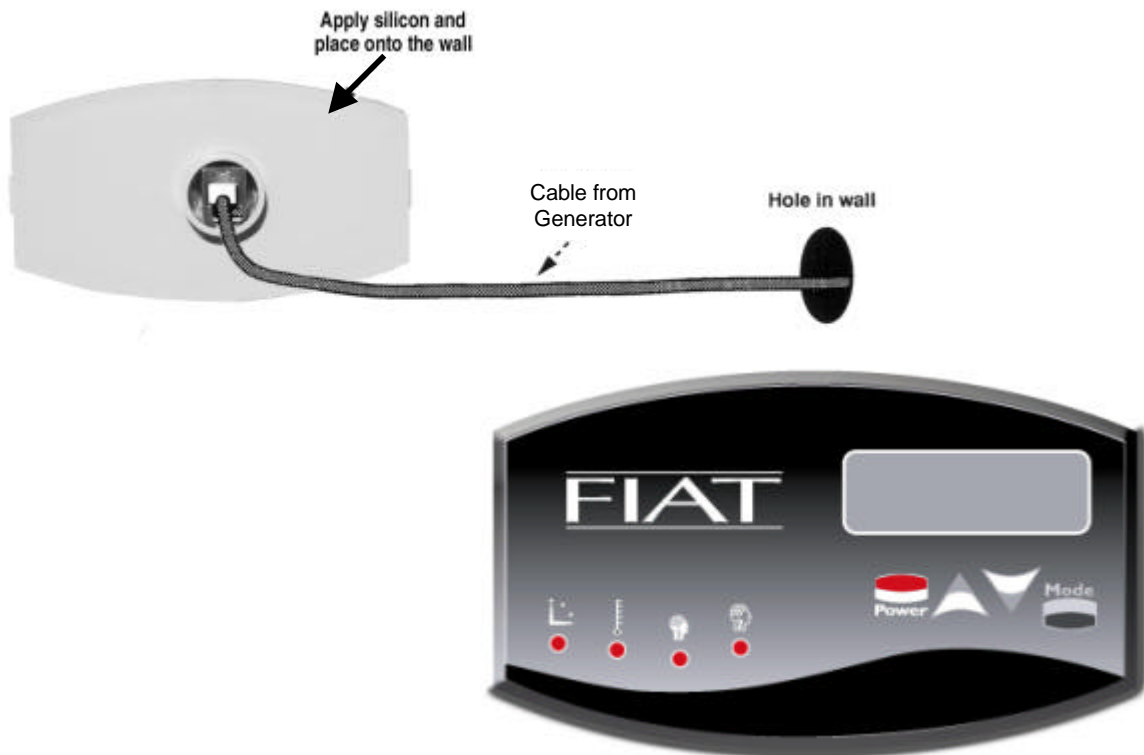


Figure 1

---

## Elite Control Operation Instructions

**WARNING:** Please consult your physician before using. If you are pregnant, elderly, have high blood pressure, diabetes, suffering from heart disease, intoxicated, or not in good health, do not use this steam bath.

1. To set the time press the “Mode” button, the colon will stop flashing; use the up/down buttons to modify the time. Press and hold for a fast rate of change. Once you have reached the current time press the “Mode” button again and the colon will start flashing again, (**see figure 2**). That indicates that the time is set.



Figure 2

2. To start unit, press the power button and it will display “On” and lights will flash for the first four minutes, after the first four minutes are up it will cycle between time remaining and current temperature. To change current time settings press and release the “Mode” button. Time light will flash. Using the up/down buttons you can adjust the length of steam bath, (**see figure 3**). If the time is all that you wish to change, set the desired length and after 10 seconds of no buttons being pushed it will automatically load the new time and start the unit at the new set time.



Figure 3

- To pause the unit, while the control is cycling between the time and temperature press the "Mode" button and hold for 3 seconds and release the LED's should say "PAUS" and either the time or temperature light should be lit, (see figure 4).

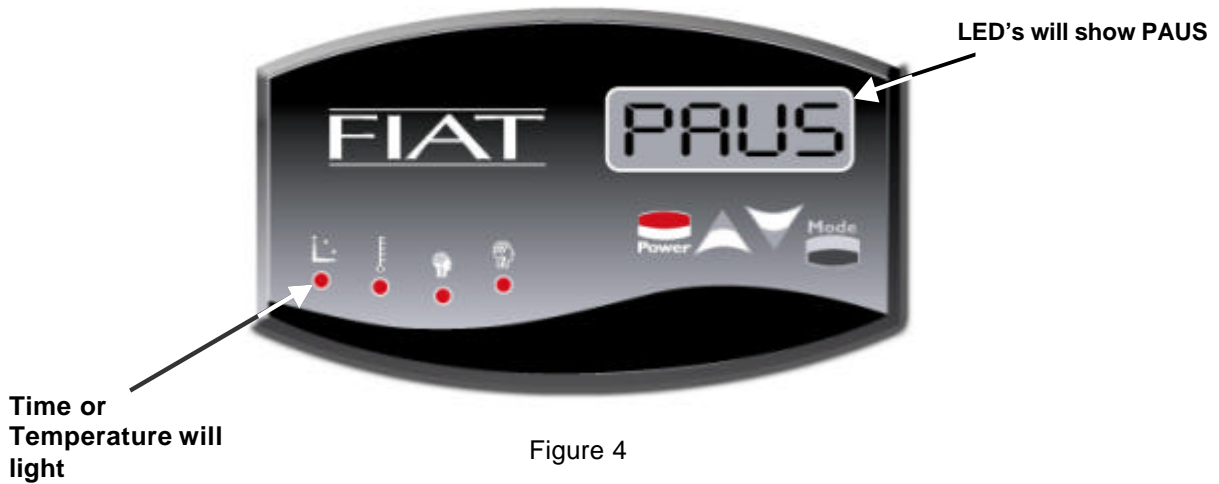


Figure 4

- To set the current temperature press and release the "Mode" button 2 times, that will take you to temperature menu to adjust the temperature press the up/down buttons until you've reached the desired temperature, (see figure 5). To change from Fahrenheit to Centigrade, while in the temperature set menu press and hold the "Mode" button for three seconds and release, to go back to Fahrenheit use the same procedure, (see figure 6). After adjusting the temperature if no buttons are touched after 10 seconds the settings will be saved and the unit will start again.

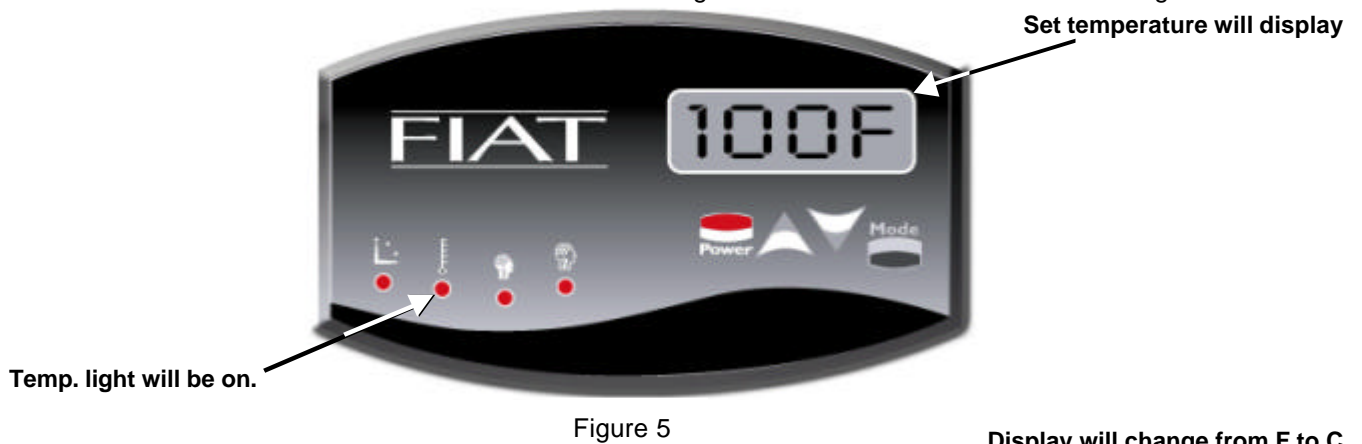


Figure 5

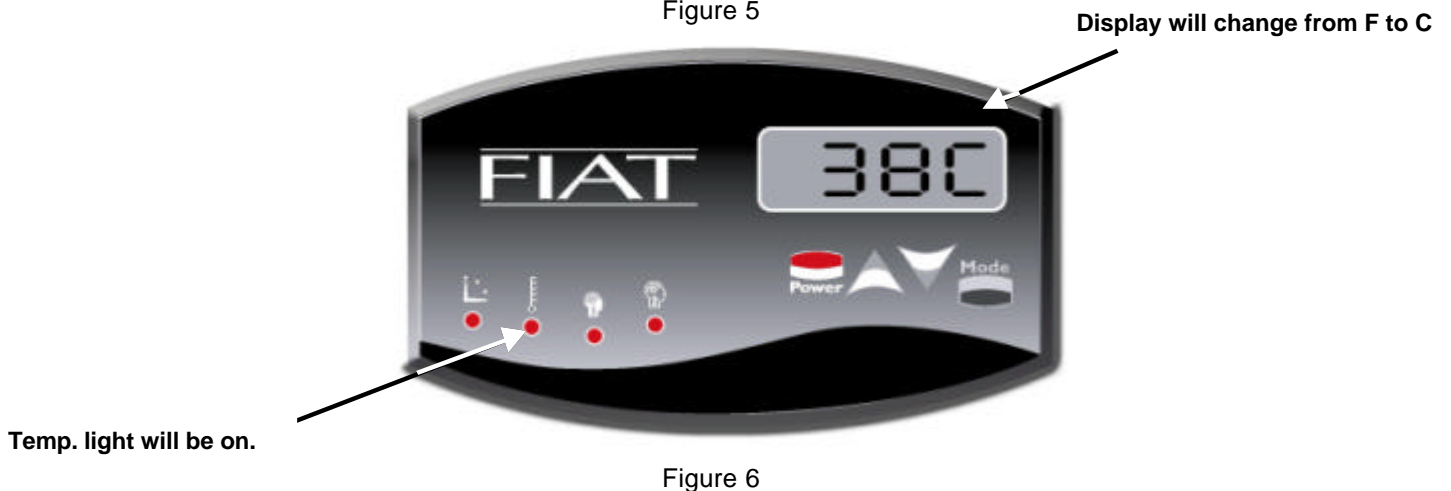


Figure 6

5. To set the memory press the "Mode" button 3 times until "P1" displays on the LED's, (see figure 7). Do not press any buttons for 6 seconds the timer light will flash use the up/down arrows to adjust to the desired length, (see figure 8). After adjusting the time wait 6 seconds and the temperature light will flash press the up/down buttons until you've reached the desired setting, once you've reached the desired temperature do not press any buttons and the unit will load the new memory settings, (see figure 9). Repeat steps to set "P2", you will need to press and release the "Mode" button four times until "P2" is displayed on the LED's.

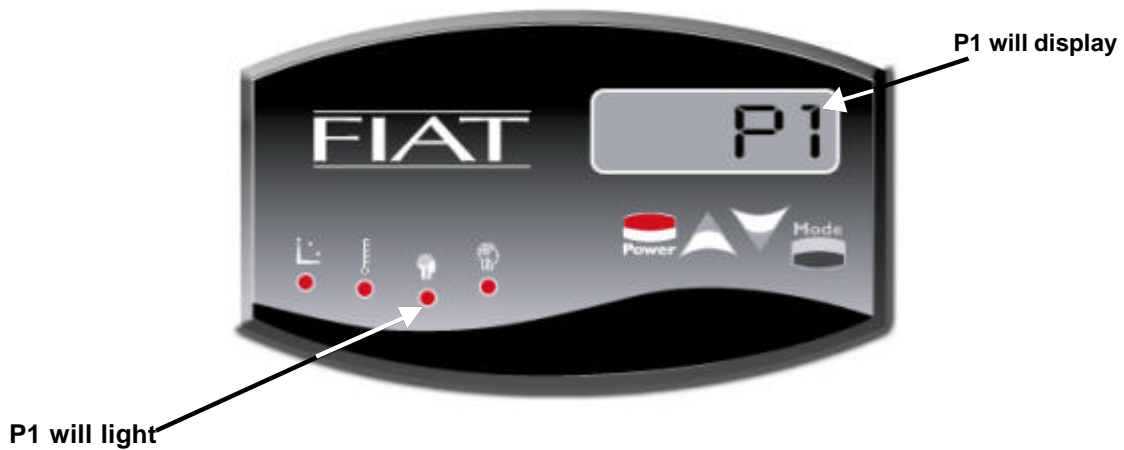


Figure 7



Figure 8



Figure 9

- 
6. If the LED's display "Err 1-4" that indicates that one of the buttons are stuck, the number along with the Err indicates which button is stuck from left to right, (**see figure 10**). For example if the up arrow is stuck the LED's will display "Err2".



Figure 10

7. If the LED's display "Err5" that indicates that the float switch is not closed due to no or low water in tank or a faulty float switch, **see figure 11**.



Figure 11

- 
8. If the LED's display "Err6" if the temperature sensor indicates that the temperature is over 135 degrees Fahrenheit the unit will shut down and display the error code, **see figure 12.**



Figure 12

**Note: If the unit has an error, you must reset the power at the beaker to reset the unit.**

If an error persists, please contact our technical support department at 800-585-7832.